

CAT. NO.  
**C006**

EDP NO.  
13006

# TENSION HANDLE and SCREW



## **BAND-IT**<sup>®</sup>

BAND-IT-IDEX, INC.  
A Unit of IDEX Corporation  
P.O. Box 16307  
Denver, Colorado 80216-0307 U.S.A.  
1-800-525-0758  
info@band-it-idex.com / www.band-it-idex.com


**IDEX**  
IDEX CORPORATION

P07287

### TO REMOVE TENSION SCREW FROM SLIDE BLOCK

Hold a lit candle (or portable gas torch) underneath part shown below for approximately 60 seconds. This will melt the sealing compound holding the screw and it may then be unscrewed.

To remove retaining ring from tension screw, pry with screw driver.

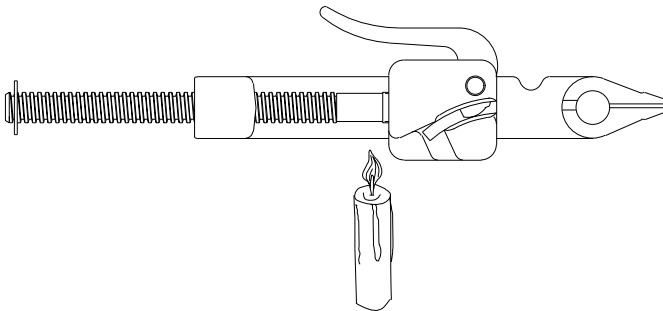

**NOTE:**  
LUBRICATE TENSION  
SCREW FREQUENTLY.

### TO ASSEMBLE TENSION SCREW AND HANDLE

Assemble tension screw to slide block, then attach tension handle to tension screw. Attach retaining ring to tension screw in location shown above. Place ring on groove, then push ring against a hard surface such as a table until it snaps securely in place. Lubricate tension screw.